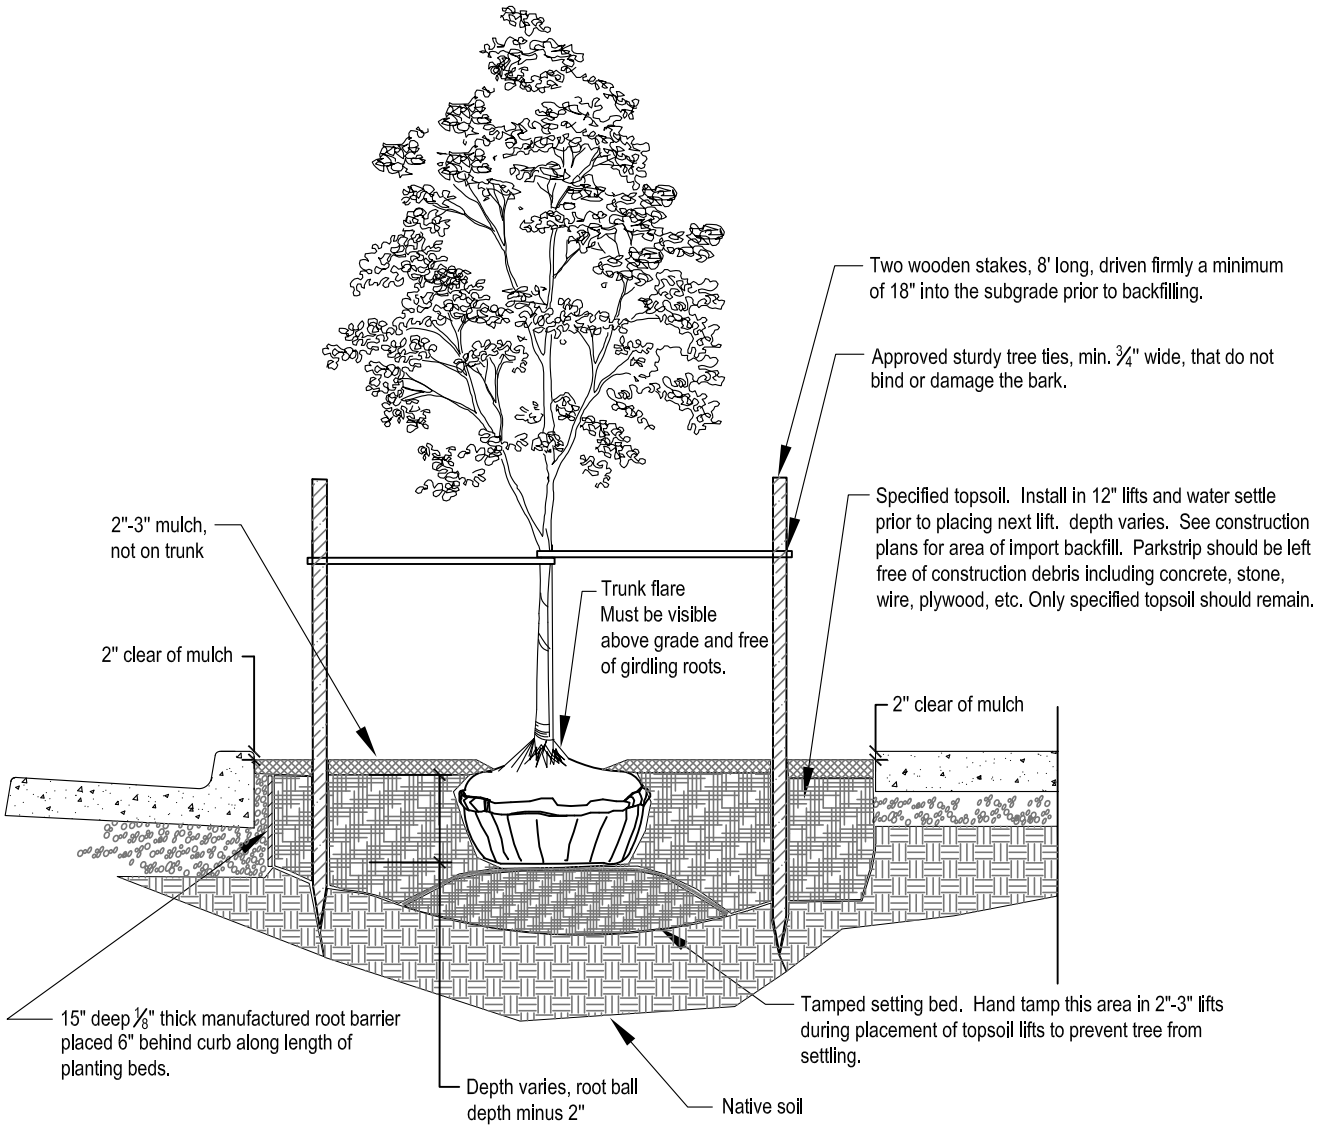

NOTES:

1. Trees must be 1.5" - 2" caliper measured 6" above the root flare
2. Loosen compacted soil to the depth of 3' the length and width of the parkstrip or island. Parkstrip soil should be approved topsoil or native soil as approved by the urban forester and should be free of construction debris.
3. Plant trees so that top of root ball or trunk flare is a min. of 1" and a max. of 2" above mulch.
4. Hole width shall be at least 1.5 times the width of the root ball. Example: 28" diameter root ball requires a planting hole that is a minimum of 42" in diameter. The pit should be excavated to its full depth for the entire area of the planting space.
5. Peel back top 1/3 of root ball burlap and cut off wire basket to a depth of 9". Remove wire basket from the top half of the root ball once tree is set in place, remove burlap from top and sides of the root ball after the first lift of backfill is completed and the root ball is stabilized.
6. For trees in lawn areas, remove a 6' dia., 3" deep circle of sod from around tree. Where there is not 6' between sidewalk and curb, see construction plans.
7. Water thoroughly during planting. See project contract documents for watering requirements. New trees should be watered with a minimum of 20 gallons of water per week between April and November. More water may be required during periods of extreme heat or drought.
8. If irrigation is not installed a 20 gallon irrigation bag should be provided to allow water to slowly seep into the root zone.

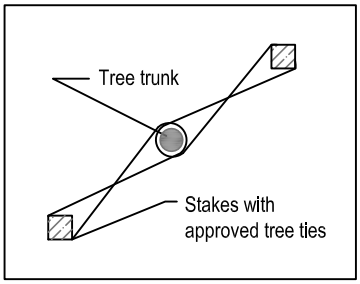

TREE STAKING DETAIL

CITY OF CORVALLIS
PARKS AND RECREATION DEPARTMENT

TREE PLANTING PARKSTRIPS AND PLANTING ISLANDS

DATE: DEC. 2015	SCALE: NONE	STANDARD DETAIL No.
APPROVED:		610